

# Wide Tyre Four-Wheel Folding Golf Cart

## User Manual

Thank you for choosing this intelligent, lightweight folding golf cart. Designed with advanced four-wheel stability and eco-friendly technology, it provides a quiet, emission-free way to navigate the course.

### Safety Guidelines & Prohibited Use

- Standard Capacity:** The maximum load is **120kg**; do not exceed this limit.
- Weather & Terrain:** Avoid driving in extreme weather like heavy rain, snow, or high winds. Never drive sideways across steep slopes.
- Operating Restrictions:** This cart is not to be used by anyone under 14 (subject to local laws), or anyone under the influence of alcohol or medication.
- Safe Handling:** Always keep both hands on the handle and both feet on the footplate while moving.
- Heat Warning:** Do **not** leave the cart inside a car or sealed boot during summer. High temperatures can cause permanent battery failure or fire.
- Environment:** Only use in permitted areas and avoid flammable or explosive environments.

### Operation Guide

#### Learning to Drive

- Pre-Check:** Always check battery levels, tyre pressure, and brakes before setting off.
- Starting:** Insert the key and turn it to the "ON" position; the power indicator will light up.
- Moving:** Gently rotate the speed control knob with your right hand to reach your desired speed.
- Stopping:** Release the handle to slow down, then apply the brakes until stationary before turning the key to "OFF".

## Controls & Functions

- **Speed Selection:** Three speed settings are available: **6km/h, 12km/h, and 18km/h.**
- **Reversing:** Press the "R" button to reverse and press it again to return to forward gear.
- **Braking/Parking:** Use the hand brake for parking to prevent the cart from sliding on uneven ground.
- **Visibility:** Turn the key clockwise two clicks to activate the LED headlamp.

---

## Folding & Adjustments

- **Folding the Cart:** Park on flat ground and remove the seat and golf bag. Pull the  **large red ball** on the right side upward to fold.
- **Unfolding:** Pull the  **small red sphere** handle to unlock the latch and pull the frame open until it clicks into place.
- **Seat Setup:**
  - **To Install:** Slot the back of the seat into the rear bracket, pull the lever under the seat, and lock the front into the front bracket.
  - **To Remove:** Pull the lever under the seat and lift the unit straight up.
- **Handlebar Height:** Loosen the quick-release handle and nut to adjust the height. **Note:** Never raise the bar past the safety marking line.

---

## Battery & Charging

- **Charging Port:** Located on the left side of the body under the pedal. \*For detachable battery, charging port is on the battery box.
- **Process:** Connect the charger to the battery first, then plug it into the wall socket.
- **Indicator:** The light is **Red** while charging and turns **Green** when full.
- **Charge Time:** Approximately 5–8 hours. Do not charge for more than 10 hours at a time.
- **Storage:** If the cart isn't used for a while, charge the battery at least **once a month** to prevent damage.

---

## Maintenance

- **Cleaning:** Use a damp cloth with water or a neutral detergent. Do **not** use high-pressure hoses or chemical solvents like petrol or alcohol.
- **Repairs:** Do not attempt to pull apart the battery or motor. Only use original spare parts to ensure your warranty remains valid.

---